



Technical Reseller Training Course Overview

PRE-INSTALLATION

- Network Settings
 - Acquiring static IP licenses
- Camera Settings
 - Determining average image sizes and frame rates to calculate storage space needed

SETUP MODE

- System Setup
- Adding IP Cameras
 - Using the exacqVision IP Camera Quickstart Guide
- Camera Recoding Setup
 - IP cameras
 - Analog cameras
- Camera Setup
 - Naming cameras
 - Maximizing motion masks and areas
 - Picking the right compression mode
 - Setting up PTZ cameras
- Trigger Input Setup
- Alarm Output Setup
- Storage Setup
- Setting up and using notifications
- exacqRecall Setup
- Event Linking
- Scheduling recording to get the most out of exacqVision
- Adding Additional Users
 - Specifying what each user can and cannot do
- Adding Additional exacqVision Servers
- Live Viewing
- Export Settings
- Working with your Operating System
- Installing the Client
- Searching for Video