

This document describes the process for configuring an exacqVision system for use with an S2 NetBox access control system.

Installing the exacqVision Web Service

If you have not already installed the exacqVision Web Service, complete the following steps:

1. Download the Web Service from <http://www.exacq.com/support/downloads.html>.
2. Install the Web Service using the instructions at <http://www.exacq.com/downloads/ev-webservice-qsg.pdf>.
3. Obtain a valid User ID and Password from the exacqVision server that will be used in with the S2 NetBox.

Configuring the exacqVision System for Use with S2 NetBox

To configure the exacqVision system, complete the following steps:

1. Obtain the IP address of the exacqVision Web Service server.
2. Confirm the port that the Web Service is using to communicate (the default is 80).
3. Obtain the OVID driver from <http://www.exacq.com/support/downloads.html>.
4. Browse to the IP address of the S2 NetBox and enter the default username and password (**admin** and **admin**).
5. Click on **Setup** and choose **Cameras** and then **Configure ExacqVision**.
6. Click on the **Help** button in the upper-right corner of the screen.
7. Click on the browser window that appears. Under **Configuring an exacqVision NVR**, click on the **exacqVision NVR Integration Guide** link and follow the instructions for the S2 NetBox.

The following illustration shows how the S2 NetBox Configure exacqVision page should appear after it has been configured. Verify that the camera count under **Discovered Information** matches the cameras enabled in exacqVision Client.

